

Metal Planter Scoop Connection Assembly & Installation Instructions



Planter boxes ship individually. A scooped connection is employed to create larger planter beds with the appearance of a single continuous planting area.

Care & Maintenance documents for download may be found at <https://tournesol.com/care>

HARDWARE

Sikaflex 1A or Similar sealant (Customer Supplied)
3/8-16 X 3/4"L Stainless Bolts
3/8" Stainless Washers (2 per Bolt)
3/8-16 Stainless Hex Nuts


TOOLS (Customer Supplied)

2ea 9/16" Hex or Socket Wrench
Caulking Gun
Disposable Cleaning Towels

STEP 1 Clean mating surfaces of each planter with water to remove dust.

STEP 2 Align planters and dry fit to ensure joining holes align.

STEP 3 Separate planters and apply sealant as shown below.

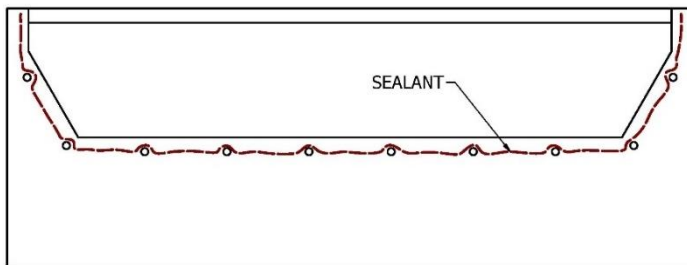

NOTE: Additional leak protection may be had by bonding a strip of waterproof membrane over the scoop joint.

STEP 4 Realign planters and bolt together (seal around each bolt).

